

List of ABS DTCs

DTC	Dashboard	Component	Description
C0044	A044	Solid State Relay	Relay over current
C0045	A045	Solid State Relay	Relay shorted (stuck on)
C0046	A046	Solid State Relay	Shorted to ground
C0051	A051	Battery Voltage	Battery under-voltage 1 (7V < Voltage < 9V)
C0052	A052	Battery Voltage	Battery under-voltage 2 (Voltage ≤ 7V)
C0053	A053	Battery Voltage	Battery over-voltage
C0060	A060	Brake Pedal	Brake pedal not applied with decel
C0061	A061	Brake Pedal	Brake pedal always applied without decel fault
C0062	A062	Brake Diode	Brake diode breakdown
C0070	A070	Pump Motor Control	Bad connection or pump supply open or low voltage
C0071	A071	Pump Motor Control	Pump ground open or motor open
C0072	A072	Pump Motor Control	Pump FET shorted
C0073	A073	Pump Motor Control	Pump FET open
C0074	A074	Pump Motor Control	Pump over current
C0075	A075	Pump Motor Control	Pump motor blocked
C0080	A080	Front WSS	HSS short to battery
C0081	A081	Front WSS	LSS short to battery
C0082	A082	Front WSS	HSS short to ground or WSS short circuited
C0083	A083	Front WSS	LSS short to ground or WSS open
C0084	A084	Front WSS	Plausibility01
C0085	A085	Front WSS	Plausibility02
C0086	A086	Front WSS	Plausibility03
C0087	A087	Front WSS	Plausibility04
C0088	A088	Front WSS	Plausibility05
C0100	A100	Rear WSS	HSS short to battery
C0101	A101	Rear WSS	LSS short to battery
C0102	A102	Rear WSS	HSS short to ground or WSS short circuited
C0103	A103	Rear WSS	LSS short to ground or WSS open
C0104	A104	Rear WSS	Plausibility01
C0105	A105	Rear WSS	Plausibility02
C0106	A106	Rear WSS	Plausibility03
C0107	A107	Rear WSS	Plausibility04
C0108	A108	Rear WSS	Plausibility05
C0120	A120	Front NO Coils	Short to battery
C0121	A121	Front NO Coils	Short to ground or open solenoid
C0130	A130	Front NC Coils	Short to battery
C0131	A131	Front NC Coils	Short to ground or open solenoid
C0160	A160	Rear NO Coils	Short to battery
C0161	A161	Rear NO Coils	Short to ground or open solenoid
C0170	A170	Rear NC Coils	Short to battery
C0171	A171	Rear NC Coils	Short to ground or open solenoid
-	A200	CAN Bus	No communication between ABS ECU and dashboard
C0210	A210	Warning Lamp Output	Short to battery
C0213	A213	Warning Lamp Output	Short to ground or open
C0230	A230	Vehicle Speed Output	Short to ground
C0231	A231	Vehicle Speed Output	Short to battery